


详细零部件&组装步骤

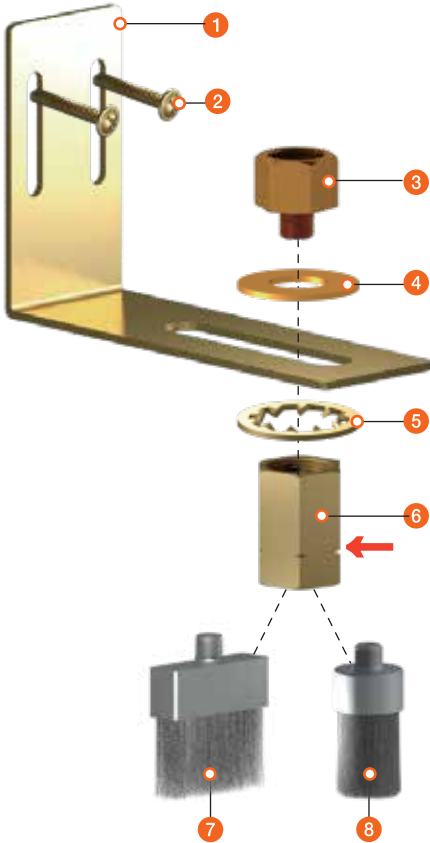

LIST	PART No.	DESCRIPTION	Q'TY
1	B003	Oil Brush Bracket, "L" Shape, Steel	1
2	B051	Self Drilling Screw, #8 x 19, Steel	2
3	A002	Reducer, PT3/8" F x PT1/8" M Adaptor, Brass	1
4	B057	Washer, Ø25 x Ø10.5 x 1.5t, Steel	1
5	B058	Tooth Washer, O.D.23mm x I.D.14.5mm x 1t, Steel	1
6	C012	Socket, PT1/8" F x NPT1/8" F, Brass	1
7	C013	Oil Brush, 2" Flat Stainless Steel, NPT1/8" M	1
8	C014	Oil Brush, 1" Round Stainless Steel, NPT1/8" M	1

组装步骤

1. 安装油刷支架 (1) 使用自攻螺丝钉固定在合适的位置 (2).
 2. 固定接头 (3), 垫圈 (4), 牙垫圈 (5), 螺母 (6), 根据适当油刷 (7) 或 (8) 把 Pulsarlube OL500 装置沿着支架槽安装在所需位置.
- 确保套管如图安装.套管线必须要朝下, 因另一端要连接NPT接口的油刷. 套管的另一端为PT接口.

注释

1. 使用PTFE 胶带缠绕油刷孔 (7) 或 (8).
2. 排量因油粘度, 环境或温度等有所不同.

LIST & PART No.	KIT No.	DESCRIPTION
[1 ~ 6] + 7 (C013)	C032	[OL500] Stainless Steel Flat Oil Brush & Bracket Kit

[1 ~ 6] + 8 (C014)	C033	[OL500] Stainless Steel Round Oil Brush & Bracket Kit
----------------------	------	---